


MULTIPANEL®

Typical installations

Shower enclosure 2 sided

2 sided shower		Shower tray size		
Description		1200x1200	900x900	1200x900
A	2400 x 1200mm unlippped panel	2		1
	2400 x 900mm unlippped panel		2	1
	2400 x 1200mm Hydrolock panel			
	2400 x 598mm Hydrolock panel			
B	Internal Corner Profile	1	1	1
C	End Cap Profile	2	2	2
D	Shower Tray / Bath Seal Kit	1	1	1
	High-Grab Adhesive	2	2	2
	Silicone Sealant - Clear	1	1	1
	Silicone Sealant - White			

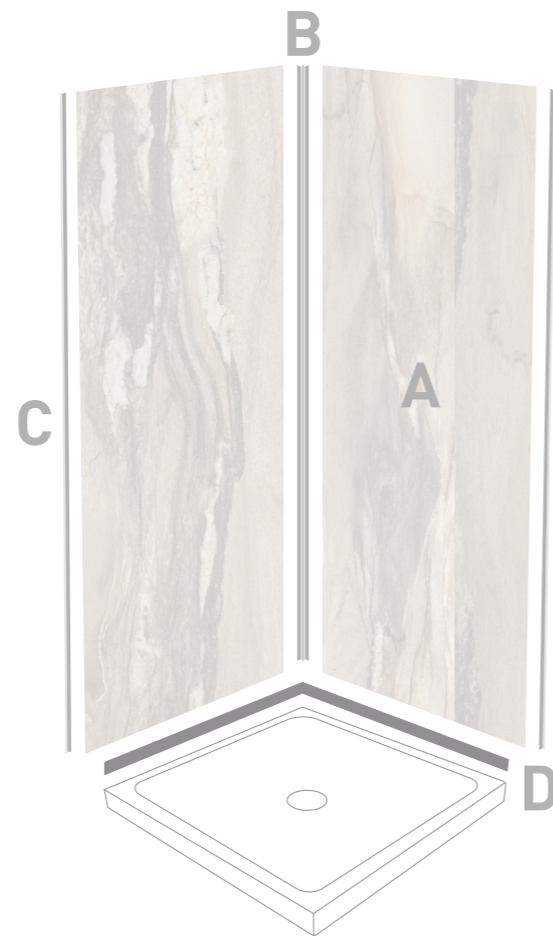


Shower enclosure 3 sided

3 sided shower		Shower tray size		
Description		1200x1200	900x900	1200x900
A	2400 x 1200mm unlippped panel	3		2
	2400 x 900mm unlippped panel		3	1
	2400 x 1200mm Hydrolock panel			
	2400 x 598mm Hydrolock panel			
B	Internal Corner Profile	2	2	2
C	End Cap Profile	2	2	2
D	Shower Tray / Bath Seal Kit	2	2	2
	High-Grab Adhesive	3	3	3
	Silicone Sealant - Clear	2	2	2
	Silicone Sealant - White	1	1	1



Walk-in Shower/Bath 2 sided

2 sided bath / walk-in shower		Bath/Shower tray size	
Description		1800x900	1800x1200
A	2400 x 1200mm unlippped panel		1
	2400 x 900mm unlippped panel	1	
H	2400 x 1200mm Hydrolock panel	1	1
	2400 x 598mm Hydrolock panel	1	1
B	Internal Corner Profile	1	1
C	End Cap Profile	2	2
D	Shower Tray / Bath Seal Kit	2	2
	High-Grab Adhesive	3	3
	Silicone Sealant - Clear	2	2
	Silicone Sealant - White	1	1

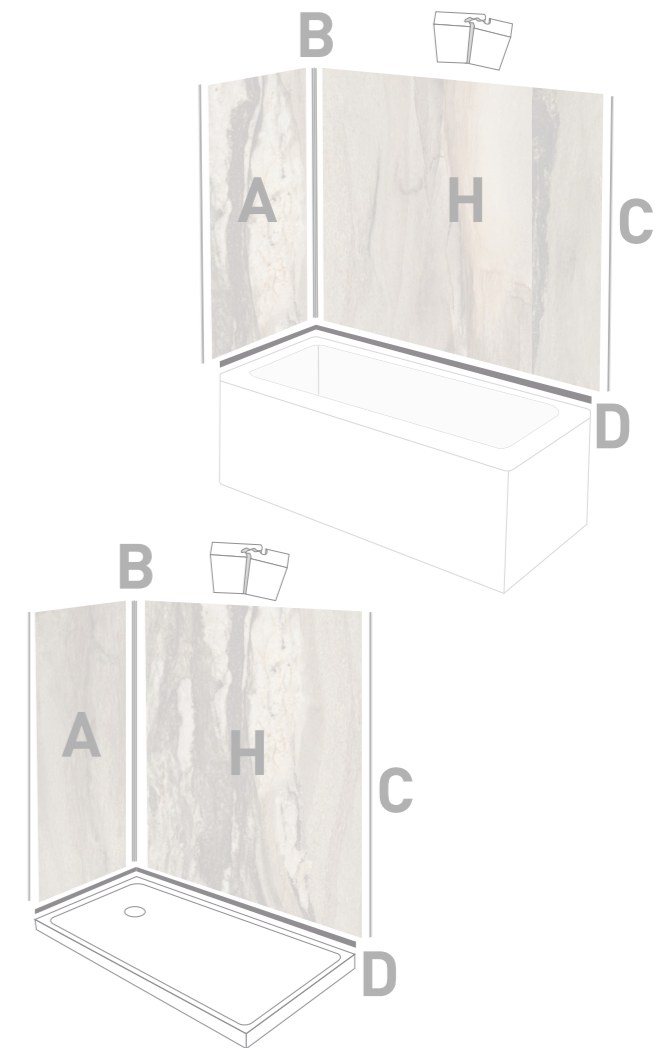

Walk-in Shower/Bath 3 sided

3 sided bath / walk-in shower		Bath/Shower tray size	
Description		1800x900	1800x1200
A	2400 x 1200mm unlippped panel		2
	2400 x 900mm unlippped panel	2	
H	2400 x 1200mm Hydrolock panel	1	1
	2400 x 598mm Hydrolock panel	1	1
B	Internal Corner Profile	2	2
C	End Cap Profile	2	2
D	Shower Tray / Bath Seal Kit	2	3
	High-Grab Adhesive	4	4
	Silicone Sealant - Clear	3	3
	Silicone Sealant - White	2	2

